



All Ranges Parts List

1	DS-110-00	Top plate shelf	16	73-000-14	Oven bottom
2	DS-120-00	Back vertical riser	17	73-240-01	Oven burner
3	DS-200-00	Body	18	73-240-01-02	Oven burner shutter
4	DS-600-00	Bull Nose	19	73-500-18	Orifice for oven burner
5	Ds-000-07	Front Panel	20	05-550-00-6	Gland nut
6	73-320-00	Oven door hinge L	21	05-550-00-3	Adapter for oven burner
7	73-310-00	Oven door hinge R	22	73-500-17	Oven pilot
8	73-300-03	Oven door handle	23	S0228111	Caster
9	73-300-00	Oven door	24	S0228112	Caster w/brake
10	73-213-00	Kick panel mounting bracket	25	73-210-17	Leg
11	73-000-06	Kick panel	26	S2020151117	Bolt with flat/lock washer leg
12	Ds-000-11	Grease pan			
13	73-000-12	Rack Support			
14	73-000-13	Oven racks			
15	73-200-07	V Baffle			

** For parts starting with DS, please specify size. (For example, CN48-2OV-110-00 for a CN48-2OV)